



MOUNTING INSTRUCTION FOR ROLLER DOORS

MODEL

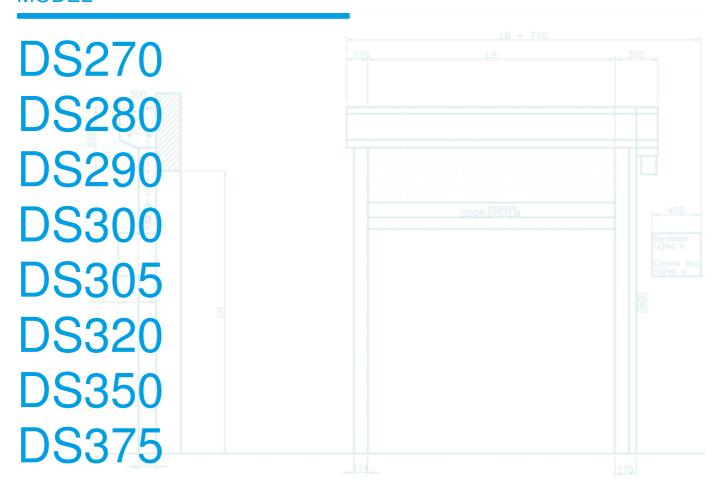

Content

The instruction covers	3
Content of delivery	3
Type of wall/fastening	
Mounting	
Tools for mounting	4
Before mounting	
Mounting of counterframe (option)	5
Mounting of frame leg on roll	5
Mounting and adjustment	7
Final mounting	
Documentation	9

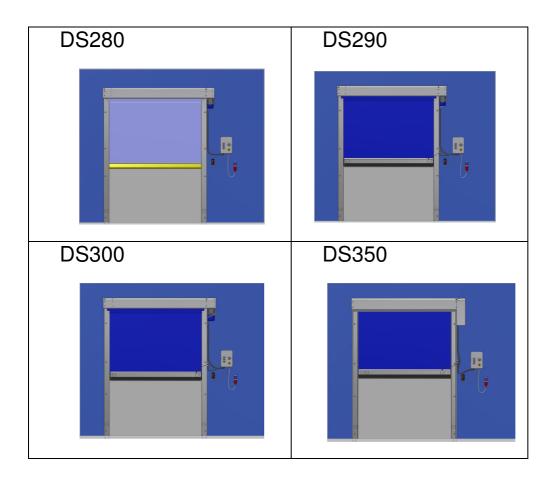


The instruction covers

This instruction covers all variations of the models stated on the front page. A variation contains the model number and following letters and possible numbers. For example, a variation can be (based on the model number DS290): DS290L, DS290-K1, DS290-K2 etc. DS700-DS850 are not covered by this instruction.

Content of delivery

Description	Comment
Counter frame, 3 or 4 frameparts incl. connectors	Option
Right and left frameleg	
Rolle	
Control	
Necessary bolts, washers, muster, screws and plugs for installation incl. toothed rim for signaller	

Type of wall/fastening

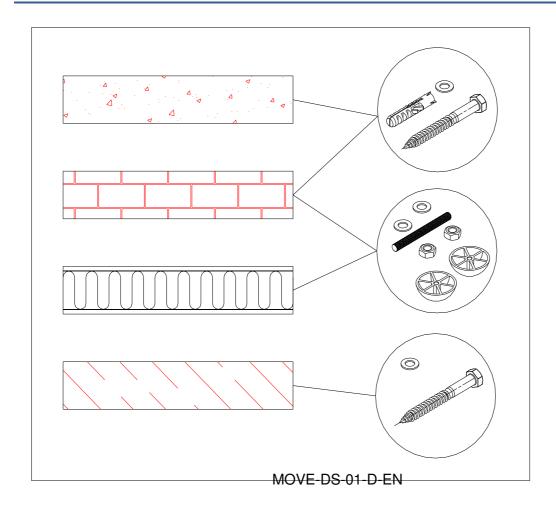


Mounting


Tools for mounting

Wedges/chocks Spirit level Power drill/screwdriver/riveter E.g. adhesive E.g. a truck or other lifting gear

Before mounting

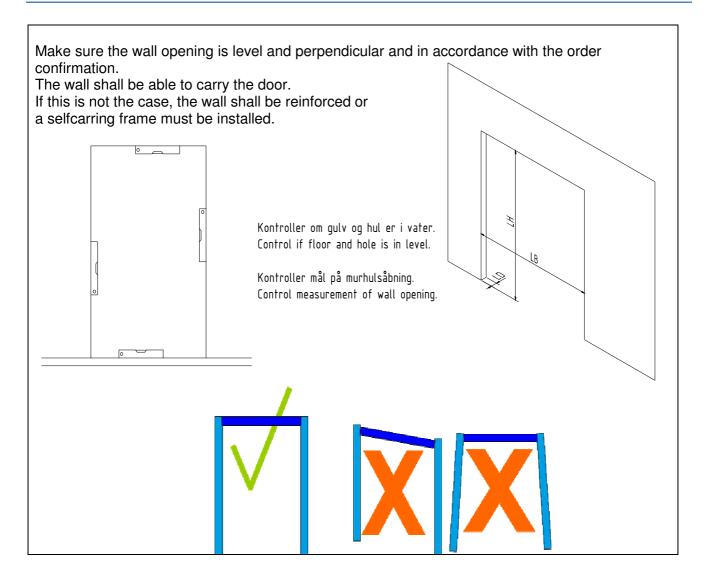


Mounting of counterframe (option)

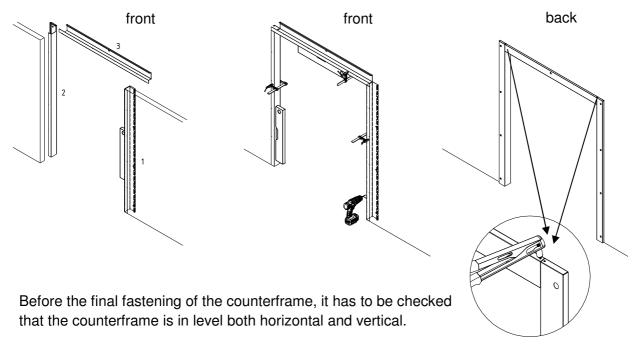


The counter frame is prepared with mounting holes and underlying mounting connectors where the counterframe has to be fastened. Drill holes through the mounting holes and fasten the counterframe with the supplied fasteners.


Mounting of frame leg on roll

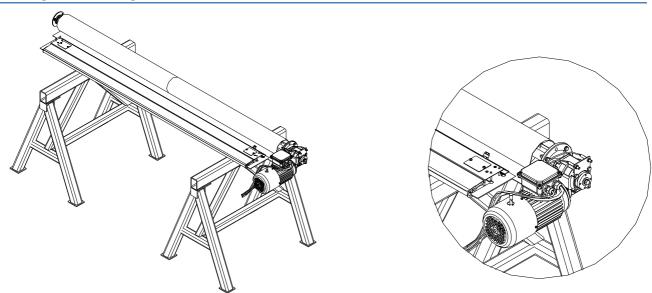


The roll with attached motor is placed in a way that both ends are free for mounting.

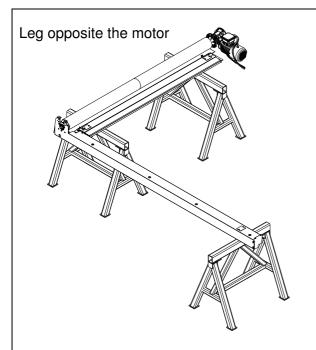

Frame leg is fastend on the internal side of the bearing, as close to the roll as possible.

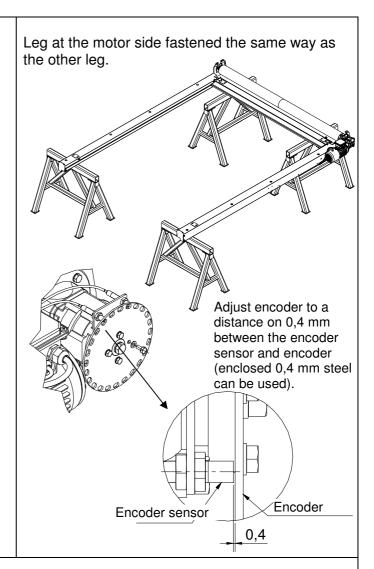

The supplied photocells are pulled from the motor side through a hole in the frame leg (in front of the motor) in plastic tubes down in each frame leg. The supplied plastic tube is placed between the frame legs and the photocell with the longest wire is pulled through and down in the frame leg furthest away from the motor.

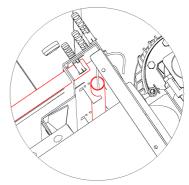


Lift up the door either by truck or manually. By manually lift of the door min. 2 men are required.


If the lift can be done manually or a truck is necessary depends on the size and the weight of the door.

Mounting and adjustment


1. The door is held up against the wall opening and the frame legs are fastened against the wall with clamps. The door is fastened in the top left and right corner. The roll must be level.

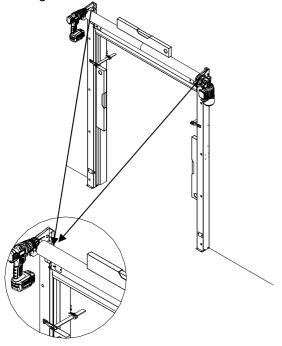


2. Possible lifting gear are removed and the blade are pushed into the sliding rail in the legs. The frame legs are adjusted to the door blade by moving it up and down. The door is moved up/down manually by using the delivered allen key or a power drill with a long allen bit for drill.

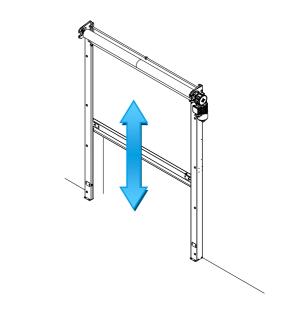

3. When the door blade is running smothly, the

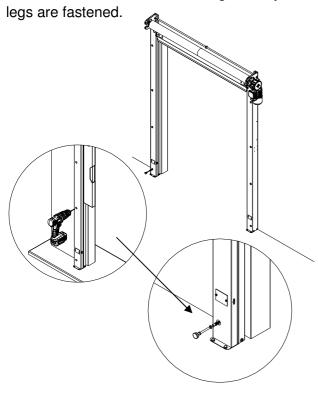


4. The legs are fastened into the floor.

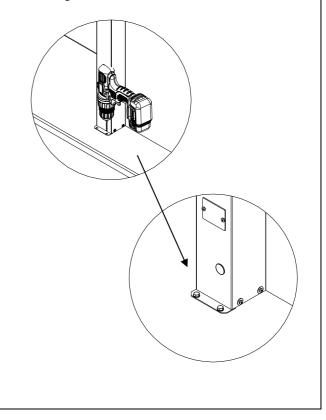


Install the control on the wall and connect the cables.


The instructions in the Door control document

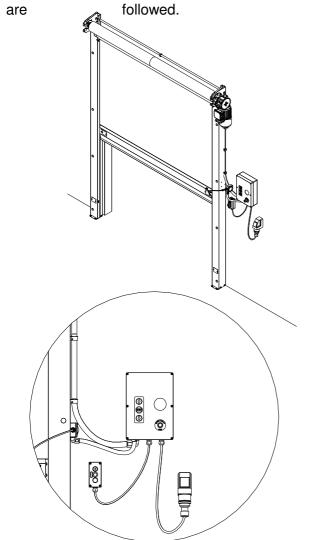


The junction box for the spiral cable is fastened to the frame leg in the prepared holes and the cables are connected to the control box.

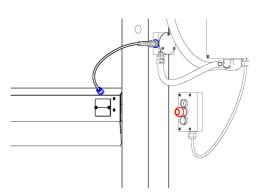

The photocells are brought down in each frame leg and fastened in the prepared connectors.

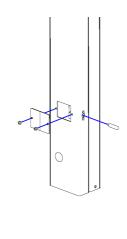

The cover

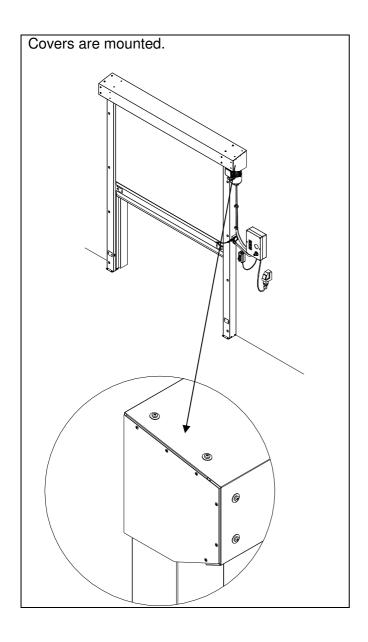

Documentation

Make sure the door sign is attached to the door.

Make sure the following documents are received:

- EU Declaration of Conformity
- Operations and maintenance manual
- Door control document